

<b>CCS Programmer</b>	<b>PIC ICSP</b>	<b>AVR ISP</b>	<b>AVR PDI</b>	<b>AVR UPDI</b>	<b>AVR TPI</b>
<b>1</b>	VPP	RESET	CLOCK	RESET**	RESET
<b>2</b>	VDD	VCC	VTG	VCC	VCC
<b>3</b>	GND	GND	GND	GND	GND
<b>4</b>	PGD	MISO	DATA	DATA	DATA
<b>5</b>	PGC	SCK			CLOCK
<b>6</b>	PGM	MOSI			

\*\* This connection is not need for UPDI programming.

Pin 1 for the CCS Programmer is the pin on the right hand side when looking into the programmer's connector with the pins on the top.